



For Ford Transit WB148 Cargo Van

128.5" x 68.49"

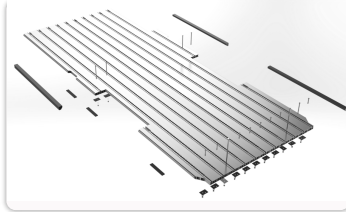


For Ford Transit WB148EL Cargo Van

157" x 68.49"

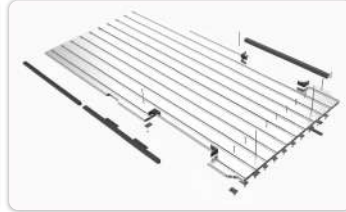

For Ford Transit WB148 Passenger Wagon

128.5" x 68.49"

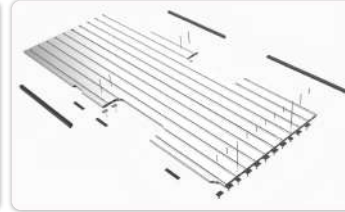


For Ford Transit WB148 EL-DRW Passenger Wagon

157" x 68.49"



For Mercedes Sprinter WB144"

128" X 64.96"

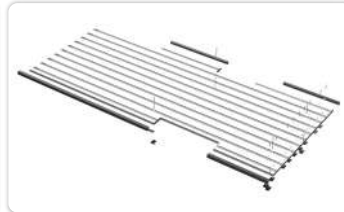

For Mercedes Sprinter WB170"

167" X 64.96"



For Mercedes Sprinter WB170" EXT

183" X 64.96"



For RAM Promaster 2500 WB 159"

141.5" x 70.79"



For RAM Promaster 2500 WB 159" EXT

156" x 70.79"

## Floor Covering



L Track Covers



Anti-Skid Floor Covering

## Ways to Move Seats



Quick Release



Slider



Manual Foot

## Ford Seat Accessories




Ford Single Seat Legs



Ford Double Seat Legs




Ford Triple Seat

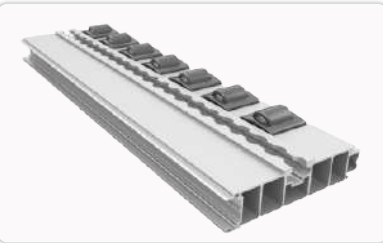

L Track Panel With Transfer Roller




L Track Panel With Ball Roller

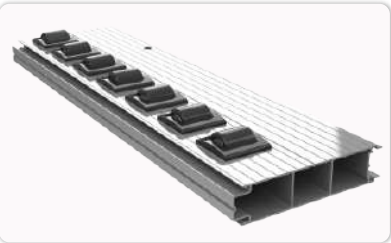

No Track Panel With Transfer Roller



No Track Panel With Ball Roller

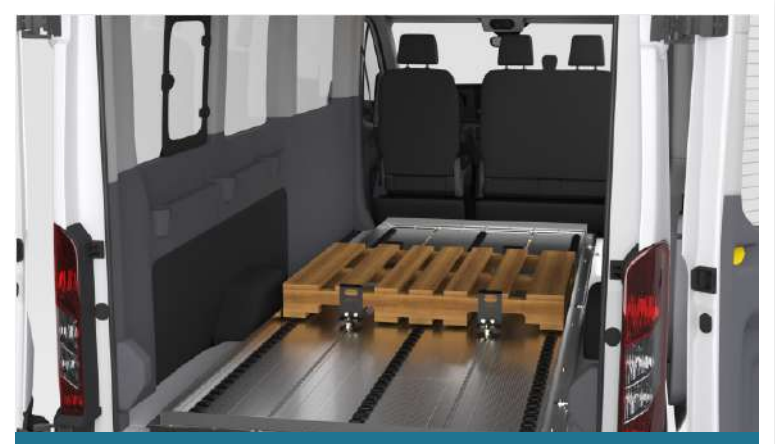


The transfer rollers allow moving pallets unidirectionally in the vehicle.



The ball rollers allow moving boxes in any direction in the vehicle.





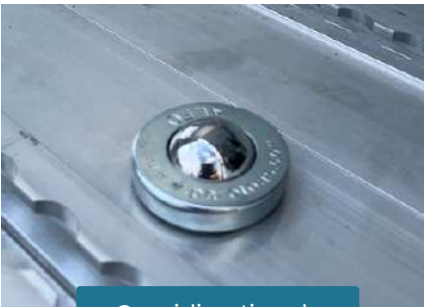

Bidirectional



Omnidirectional



OEM	Wheelbase	Width Available (Between Wheels)	Length Available	Mover Floor Length
 Ford Transit Passenger	WB148	52"/53"	128"	128
	WB148EL	52"/53"	157"	157
 Ram Promaster	WB159	56"	130"	128
	WB159EL	56"	146"/155"	157
 Mercedes Sprinter	WB144	53"	122.5"	X
	WB179	53"	161.5"	157
	WB179EL	53"	177"	157
	WB155EL	52"	126/132"	128