

# Pareto

Aluminum Systems




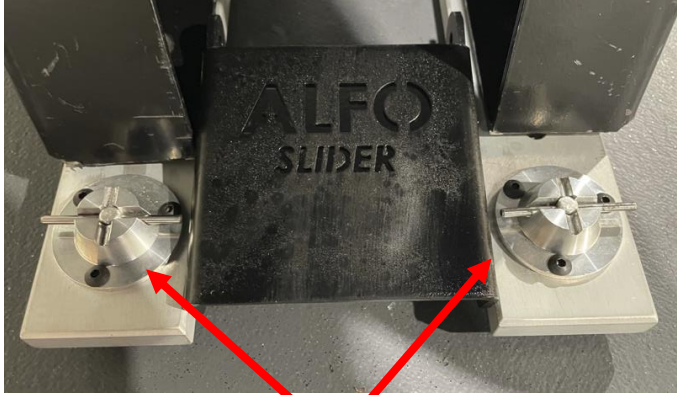
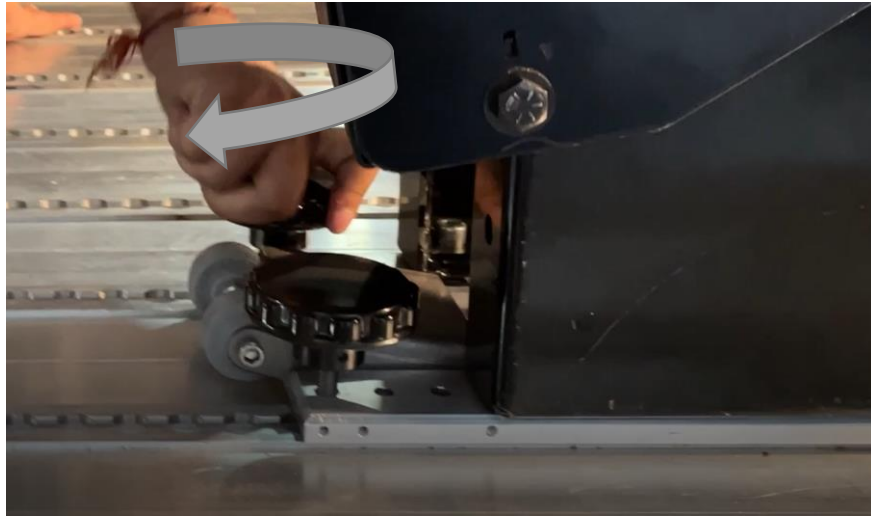
# ALFO<sup>TM</sup>




**Aluminum Flooring System**

[www.paretoas.com](http://www.paretoas.com)

Slider Installation Guide for  
Freedman Seats

#	Install Step	Safety and Checks	Description, Pictures and figures
1	Choose the correct seat & Seat legs		 <p>Freedman Single Go/Es Seat</p>  <p>Pareto Style Freedman Seat leg</p> <p>Pitch should be an inch</p> 
2	Attach the slider to Freedman seat legs	<p>Ensure that the torque of 55N-m is applied to M10 bolts</p>  <p>Ensure to use lock washer</p> 	<p>Use 4 qty M10- 1 ¼" bolts, Class 12.9 here</p>   <p>Use 4 qty M10- 1 ¼" bolts, Class 12.9 here</p>   

#	Install Step	Safety and Checks	Description, Pictures and figures
3	Lock the seat in the Van	 Ensure to push the seat for locking until "click" sound	<p>1. Insert the stud that is underneath slider in the L-track of the floor.</p>  <p>2. Lock position of the locking pin</p> <p>Ensure to push the seat for locking until "click" sound</p>
4	Prevent the rattling of seat		<p>Ensure the anti-rattling knobs are hand tighten to last turn</p> 

#	Install Step	Safety and Checks	Description, Pictures and figures
5	Unlock the seat to change the position	 Wear safety shoes while doing adjustment	 <p>Loosening the Anti-rattling knob</p>  <p>Unlock position of the locking pin</p>