

Pareto

Aluminum Systems






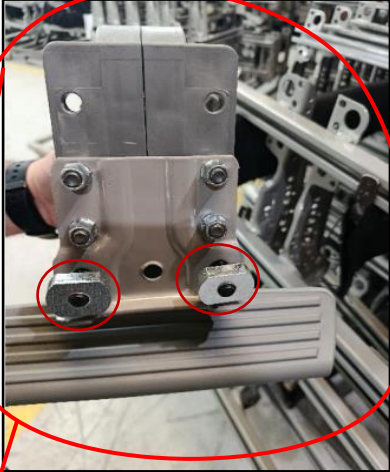
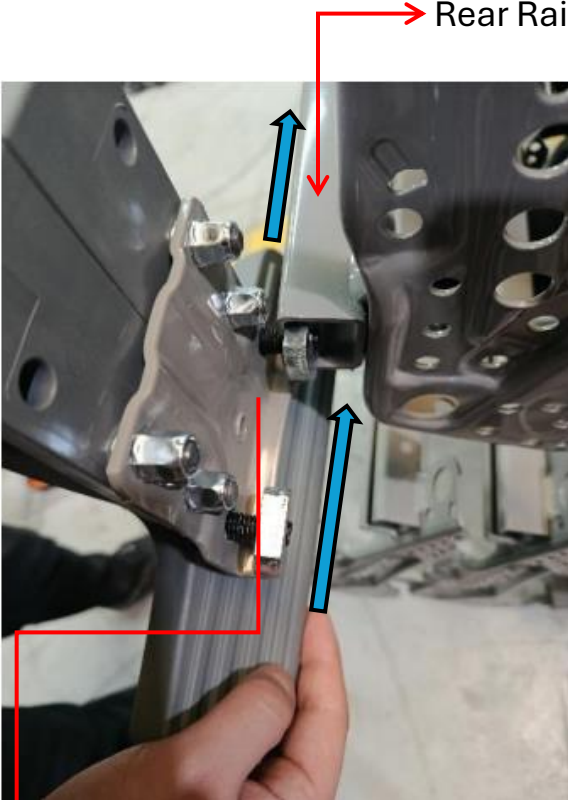
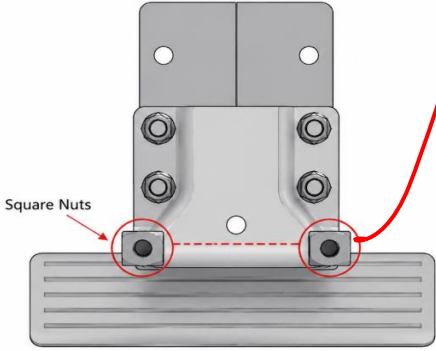
**ALFO**<sup>TM</sup>

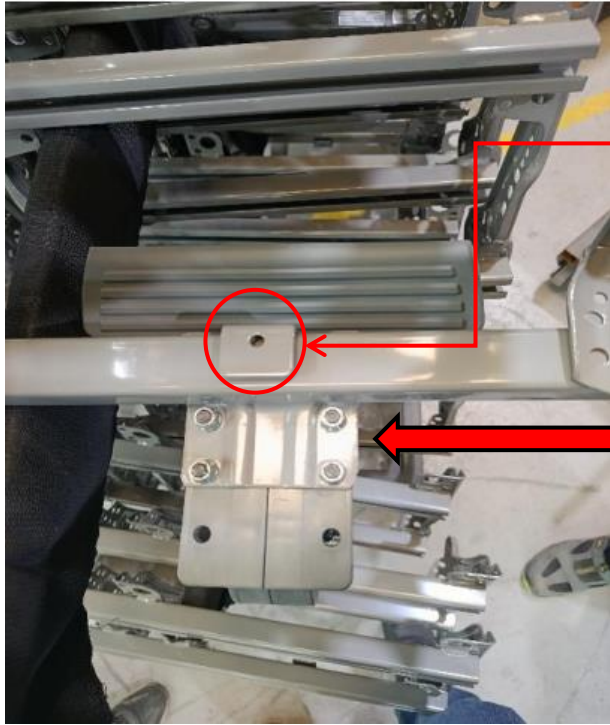
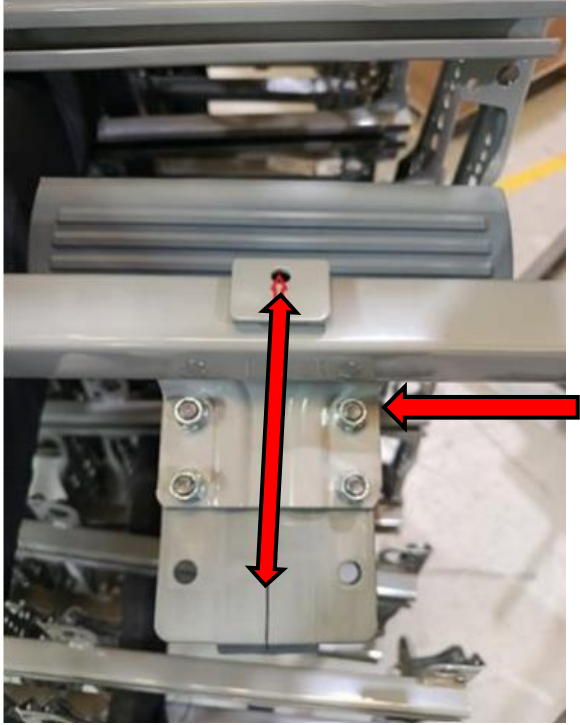
**Aluminum Flooring System**



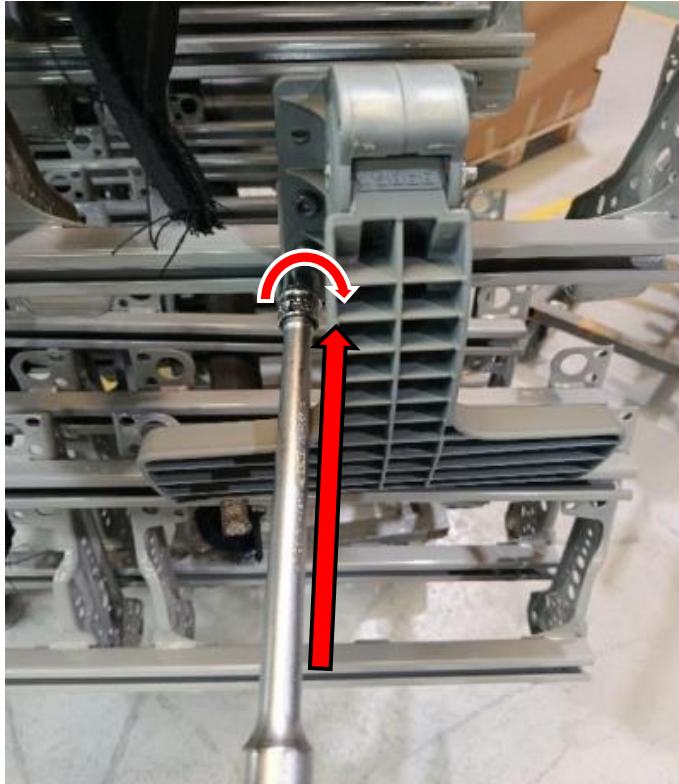
[www.paretoas.com](http://www.paretoas.com)

## Installation Guide for Foot rest on Sege seats

#	Tools	Description, Pictures and Figures
1	Torque Gun	 <p>Used to tighten bolts and nuts to a specified torque value for secure and accurate assembly.</p>
2	17 mm socket & wrench	 <p>Used to tighten or loosen 17 mm bolts and nuts during assembly and installation.</p>

#	Installation Steps	Description, Pictures and Figures
1	<p><b>Step 1:</b></p> <ul style="list-style-type: none"> <li>Align the square nuts horizontally in the footrest assembly.</li> <li>Insert the square nuts along with the footrest assembly into the rear seat rail (Fig. 1.3).</li> </ul>	 <p>Image 1.1</p>  <p>Image 1.2</p>  <p>Image 1.3</p> <p>Rear Rail</p>  <p>Front View</p> <p>Foot Rest Assembly with Square Nut</p>

#	Installation Steps	Description, Pictures and Figures
2	<p><b>Step 2 :</b></p> <ul style="list-style-type: none"> <li>• Use the seat insert sheet on the chassis as a reference point.</li> <li>• Align the footrest centrally and parallel to the seat level (Fig. 2.2).</li> </ul>	 <p>Image 2.1</p>  <p>Image 2.2</p>

#	Installation Steps	Description, Pictures and Figures
3	<p><b>Step 3 :</b></p> <ul style="list-style-type: none"> <li>• Tighten all bolts using a torque gun with a 17 mm socket and wrench(Fig. 3.1)</li> <li>• Ensure all bolts are securely fastened.</li> </ul> <p> Apply 55- 65 Nm torque on the bolts</p>	<div style="display: flex; justify-content: space-around;"> <div data-bbox="912 425 1574 1192">  <p style="text-align: center;">Image 3.1</p> </div> <div data-bbox="1740 416 2415 1192">  <p style="text-align: center;">Image 3.2</p> </div> </div>